

# 418 Fee Display




## Wiring Instructions

### Voltage

This sign operates within an input range of 120VAC to 277VAC.

### What You Need:

Phillips Head Screw Driver  
Slotted Screw Driver  
Wire Connectors

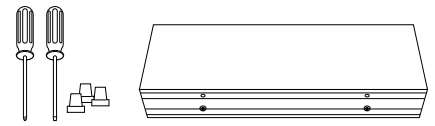


Always turn off the power prior to installation.




Be sure any metal debris cleared out of the cabinet.

Fee Display (front)

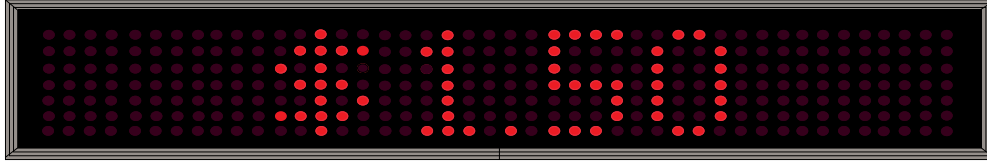


### RS-485 Wiring Diagram

**Do not use with RS-232**

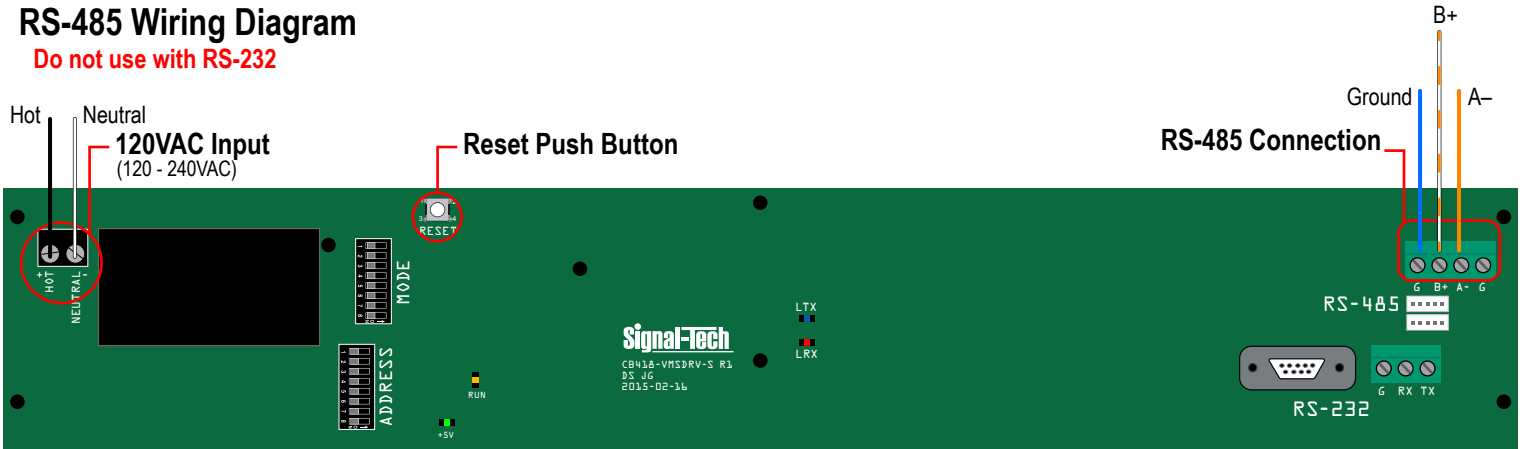


### RS-232 Wiring Diagram

**Do not use with RS-485**

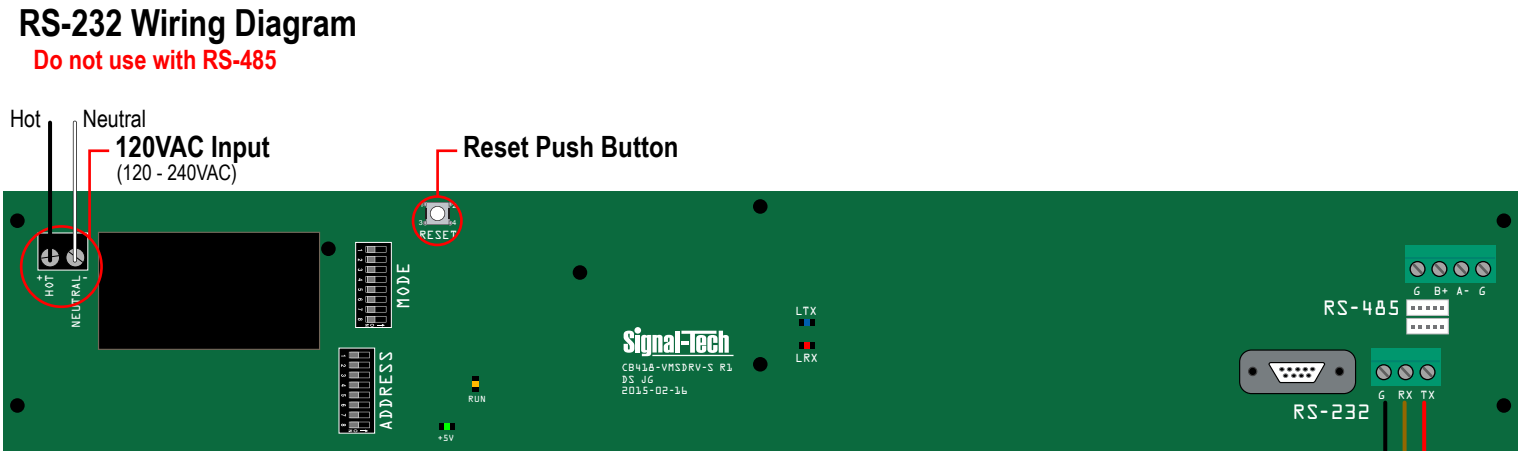

#### RS-232 DB9 Connection

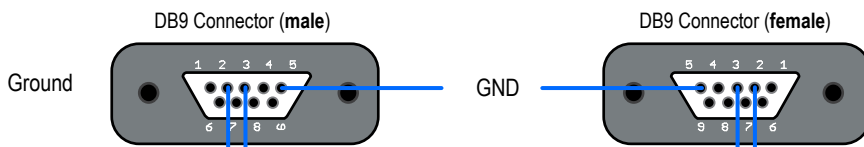

#### DB9 Connections

Display (female)	Computer (male)
Pin 5 - GND	Pin 5 - GND
Pin 3 - RX	Pin 3 - RX
Pin 2 - TX	Pin 2 - TX

\*Use RS232

**USE ONE WIRING TYPE  
EITHER DB-9 OR HARD  
WIRE RS-232**

#### RS-232 Hard Wire Connection

