

# Smart Sign System User Instructions for Web Interface

This page intentionally left blank.



## Web Interface User Instructions

The Web Interface is a secure environment or authorized users only. The network administrator will provide you the web path, user name and default password to access the Web Interface.

## Overview

To login to the Web Interface, enter the web path in your browser address bar. Enter your User Name and use the default password "password". You will be prompted to immediately change your password.

Functions of the web interface for Authorized Web Interface Users


- View sign status
- View schedule being displayed by the sign
- Manually override current message schedule (immediate)
- Add a scheduled override to the current message schedule (future date)
- Return to preset message schedule

# Instructions

1. Enter your Username and Password then press Log In



The first time you login you will be prompted to change your password. Once you **Log In** and change your password, the overview screen will display. This screen is organized by **Sign Group**, which is typically the location of the sign(s). On this screen you can see the Sign Name, Sign Type, current Schedule, and current Status of the sign.

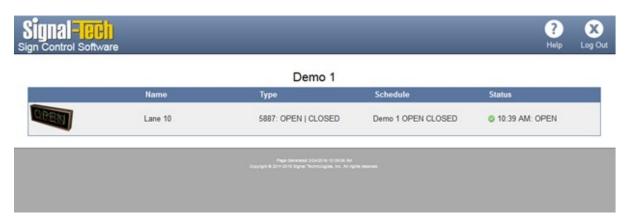

- 1. To view the schedule or to override the current schedule, click on a sign from your **Sign Group**(s)
  - a. To IMMEDIATELY override the schedule click the **Manual Override** button.



b. To set an override in the future, click Add New Override.



- 2. Setting a Manual Override (immediate)
  - a. Static Message Smart Sign
    - i. Using drop-down boxes, select the sign message(s) you want to display immediately. Select the time the override will expire. This can be set for 23.75 hours from the current time. Click **Override** button to complete. Override message will display, on the sign, immediately. The sign will resume its regular schedule when the override message expires.




ii. You can change or remove the **Manual Override** at any time using the specific button shown below.



### b. S-VMS Rebel Smart Sign

i. Enter the text as you would like it to display. Keep in mind the size of the display area. If the message is too long to display at one time, it will automatically be set to scroll by the software.

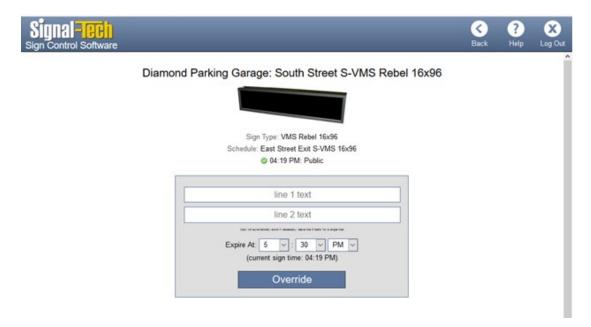

- ii. Set the expiration time. This time can be set for up to 23.75 hours from the current time. and then click the **Override** button to complete. The manual override message will display immediately. The sign will resume its regular schedule when the override expires.
- 2. Setting a Scheduled Override (future date)
  - a. Static Message Smart Sign
    - i. Select the static message to be displayed as well as the start date, start time, end date and end time.




- b. S-VMS Rebel Smart Sign
  - i. Select **Add New Override** to set a future override on the current schedule.

Sign Control Software Web Interface Setup Guide Copyright © 2017 Signal Technologies, Inc.



IMPORTANT: The Message must have been entered by the administrator in the software to be selected in the Web Interface. New Messages cannot be added in the Web Interface.

- ii. Enter the Description of the Override, start date, start time, end date and end time.
- iii. Select the **Message** that needs displayed during the override time.

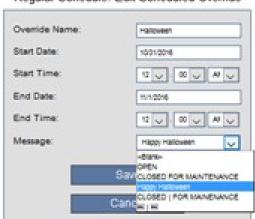

Regular Schedule: Edit Scheduled Override

iv. Save the changes and continue, use the **Back** button in the top right corner to return to the Sign Group overview page.