



NOTE: Sign image may not exactly represent the finished product. For illustration purposes only.

# Direct Burial Post Mount


Front View

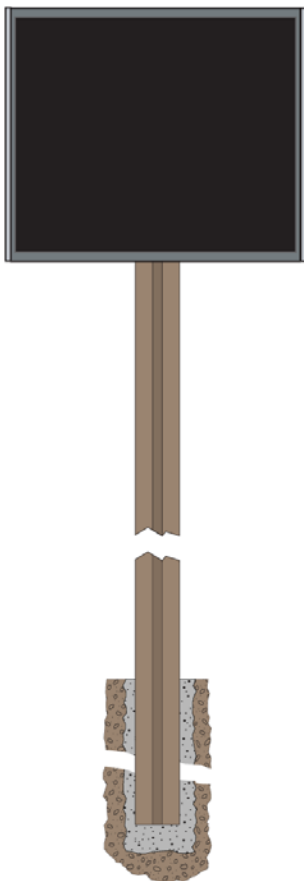

Top View

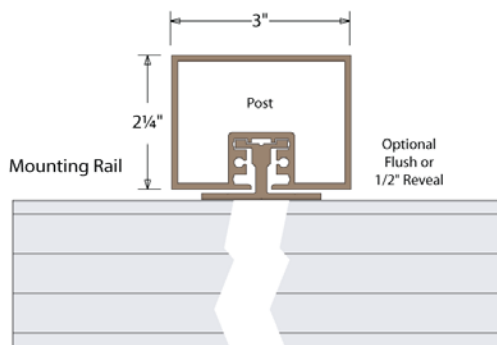

## Installation

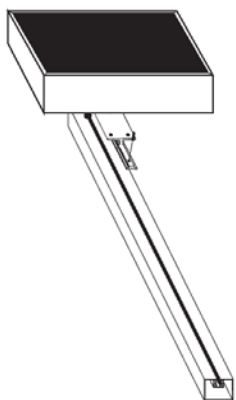

### Center or Double Post Mount

- Lay the post(s) on ground, slide cabinet with mounting extrusion already attached into post slot.
- Align the cabinet flush with top of the post(s).
- Tighten the set screw in the mounting extrusions and fasten the post cap on the post(s).
- Dig one or two 8" diameter by 30" deep holes, insert sign and fill hole with concrete.
- Level the sign both horizontally and vertically.



**Note:** Make appropriate wiring connections per local codes.

